 


Disassembly instructions

Saga

STEP 1

Unplug the power connection to the luminaire by pulling apart the WAGO connectors.




STEP 3

Unscrew the screw(s) on the driver touch protection using a screwdriver with a PH2 head.

Unplug the LED cables by pressing down the cable securing button on the driver.

STEP 2


Take down the luminaire.

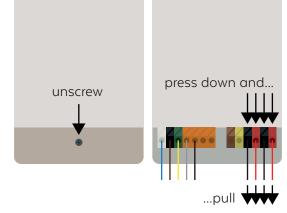

STEP 3


Remove the diffusor from the luminaire by slightly tilting.

N.B. Don't use force or any sharp objects.

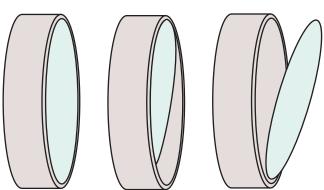

STEP 4

Unplug the light source(s).

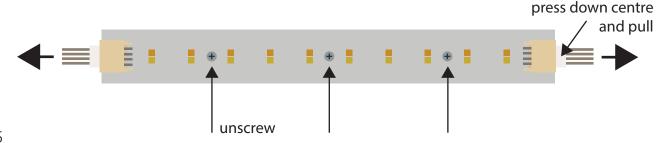

STEP 5

Unscrew the screws holding the light source(s) with a suitable bit and a screwdriver.

STEP 6

Recycle all parts accordingly.

If replacing the light source; attach new light source and remount the luminaire by following this instruction in reverse.

