


STEP 1

Unplug the power connection to the luminaire by pulling apart the WAGO connectors.

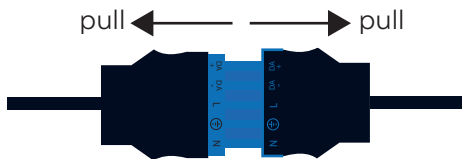

STEP 3

Unscrew the screw(s) on the driver touch protection using a screwdriver with a PH2 head.


Unplug the LED cables by pressing down the cable securing button on the driver.

STEP 4

Remove the luminaire from its holder by removing the four screws on the outer ring using a suitable bit and screwdriver.

STEP 5

Remove the glass and reflector by unscrewing the top of the luminaire.

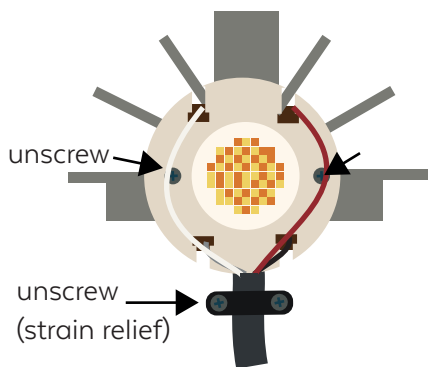

STEP 6

Unscrew the strain relief and LED COB holder to expose the light source.

STEP 7

If re-placing the light source (LED COB) use thermal paste between the lightsource and heat sink and remount the luminaire by following this instruction in reverse.

Recycle all parts accordingly.

STEP 2

Take down the luminaire.

