


STEP 1

Unplug the power connection to the luminaire by pulling apart the WAGO connectors.

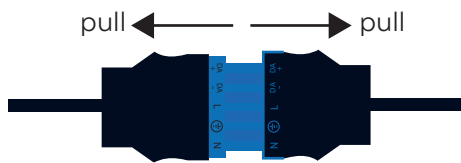


STEP 3

Unscrew the screw(s) on the driver touch protection using a screwdriver with a PH2 head.

Unplug the LED cables by pressing down the cable securing button on the driver.


STEP 2

Take down the luminaire.

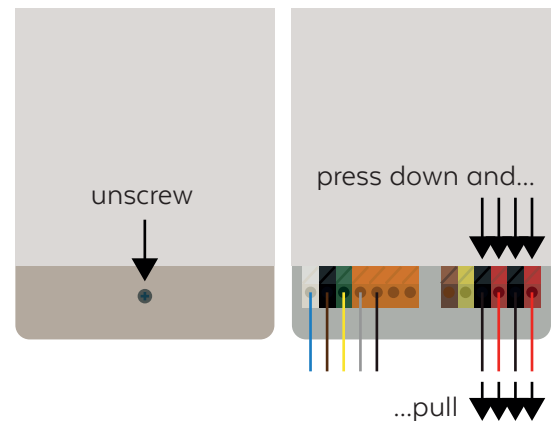

STEP 4


Expose the light source by unscrewing the screws holding the reflector part using a screwdriver with a PH4 head.

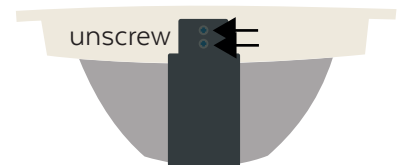

STEP 5

Unscrew the LED holder to remove light source using a screw driver with a PH4 head.

N.B. Use thermal paste between lightsource and heat sink if replacing with a new light source.

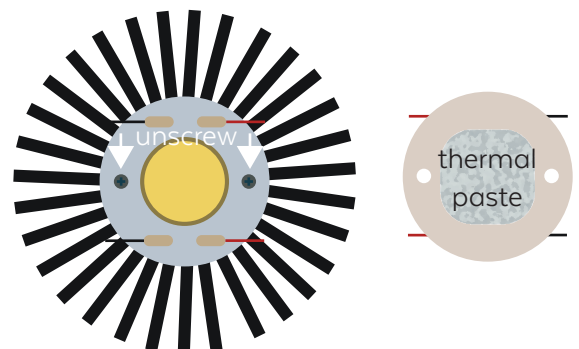

STEP 7

Recycle all parts accordingly.

If replacing the light source; attach new light source and remount the luminaire by following this instruction in reverse.

