




**STEP 1**

Unplug the power connection to the luminaire by pulling apart the WAGO connectors.

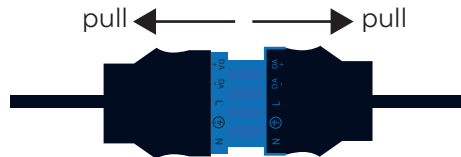

**STEP 2**

Take down the luminaire from the track by pushing the securing lever to the side.

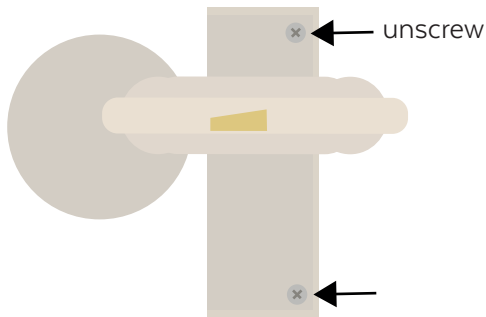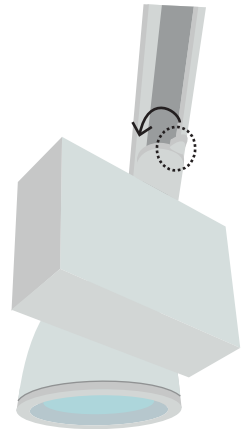


**STEP 3**

Remove the driver by unscrewing the two screws on the side of the luminaire with a suitable bit and screwdriver.

**STEP 4**


The driver is attached to the metal box with a screw, to remove the driver, unscrew this screw with a suitable bit and screwdriver.

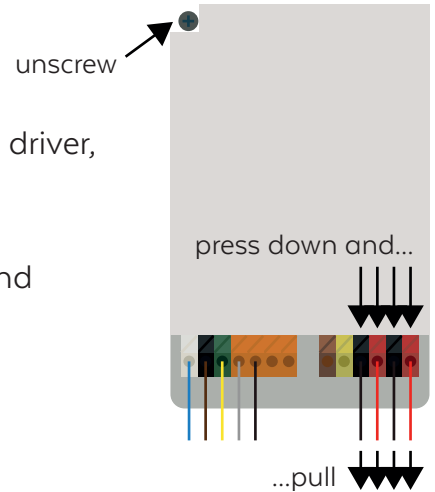

To unplug the LED cables, press down the cable securing button and gently pull out the wires.


**STEP 5**

Remove the glass and reflector by unscrewing the top of the luminaire.

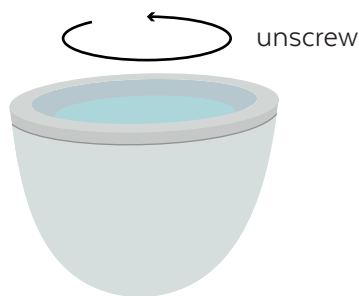

**STEP 6**

Unscrew the LED COB holder to expose the light source.

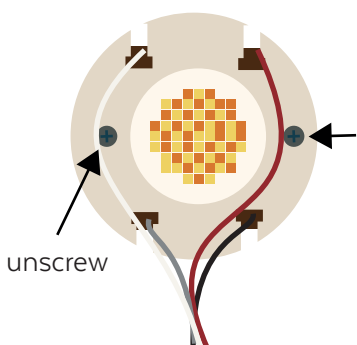

If re-placing the light source (LED COB) use thermal paste between the lightsource and heat sink and remount the luminaire by following this instruction in reverse.

Recycle all parts accordingly.

