


## STEP 1

Unplug the power connection to the luminaire by pulling apart the WAGO connectors.

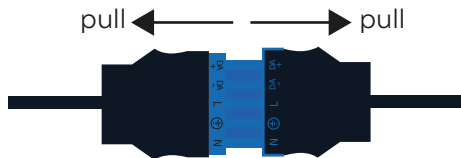


## STEP 2

Make sure the LED driver is disconnected from power supply. Remove the driver touch protection with a flat head screwdriver. Unplug the LED cables by pressing down the tabs on the driver.

## STEP 4

Unscrew all screws on the back of the luminaire with a suitable bit and a screwdriver.

To remove the metal back plate, gently pull away from the cable opening (see figure). Use gloves as edges might be sharp.

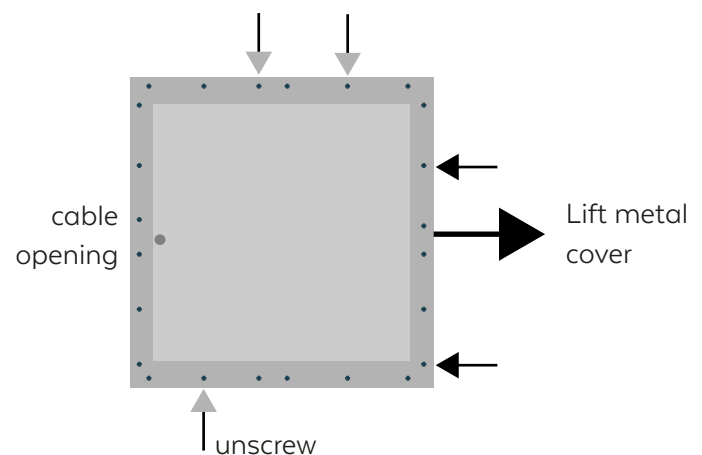

## STEP 6

Gently peel off light sources (glued on).

## STEP 7

Recycle all parts accordingly.

If replacing the light source; De-solder cables from light source if re-using cables, else, replace lightsource and cables and recycle accordingly.

Reassemble the luminaire by following this instruction in reverse. Use a thermally conductive glue to mount the new light sources