


STEP 1


Unplug the power connection to the luminaire by pulling apart the WAGO connectors.

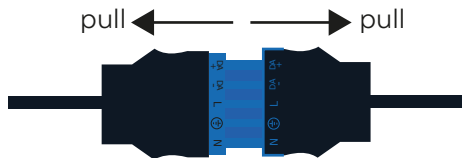

STEP 2

Remove diffuser by holding firmly on the sides and pulling it hard away from the luminaire.

Disconnect LED wires and remove light source by peeling off the PCB from one side. The PCBs are attached with a double-sided adhesive tape.

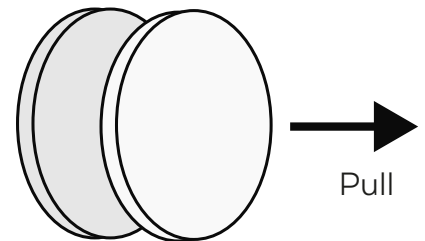

STEP 3

Make sure the LED drivers are disconnected from power supply.

Unplug LED and power cables by pressing down the tabs on the driver. Loosen screws holding drivers.

Remove and recycle drivers.

STEP 4

Separate plastics and metals.

Recycle all parts accordingly.

Reassemble the luminaire by following this instruction in reverse.

Follow adhesive manufacturer's instructions for applying the adhesive on the LED PCBs.